


Tuning the Drums

Use the included drum key to tune your drums.

Following the order below, tune your drums by turning the key clockwise one quarter turn at a time. Turning the key raises the pitch of the drums, while turning it to the left lowers the pitch.



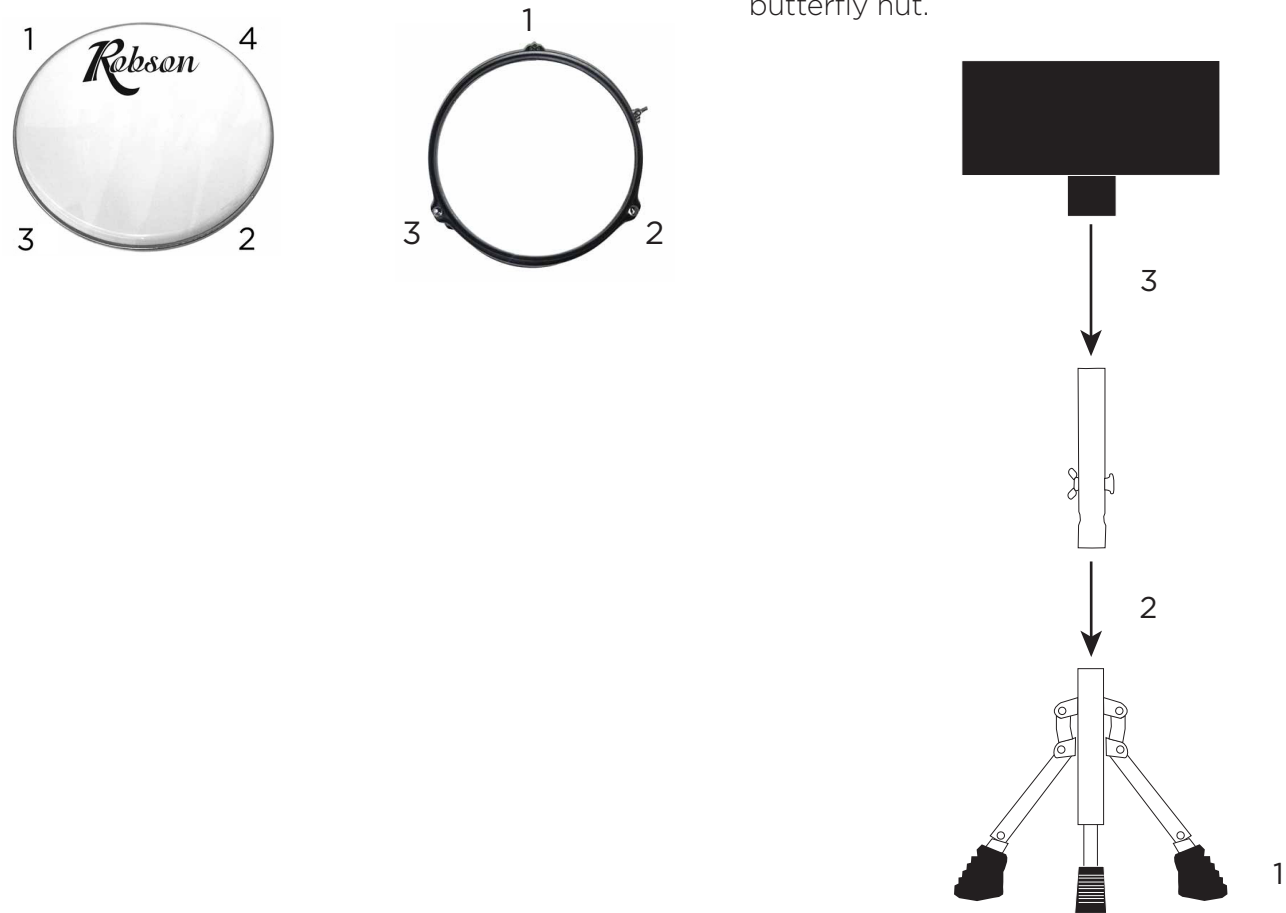






 





Assembling the Stool

- 1 - Extend stool stand feet.
- 2 - Insert riser in to stand so that butterfly nut and rivet slide completely into grooves on the stand. Tighten butterfly nut.
- 3 - Place stool seat cushion onto stand, tighten butterfly nut.



JUNIOR DRUM SET - INSTRUCTION MANUAL

PARTS LIST:	Bass Drum  Bass drum spurs (2) 	Bass Drum Skins  Bass drum hoops (2) 	Rods and nuts (4) 
Foot Pedal 	Felt Beater  Foot Pedal Screw 	Snare Drum 	Tom Drum 
Mounting Arms (2) 	Tuning Key 	Drumsticks (2) 	Cymbal 
Cymbal Arm and hardware 	Stool Seat Cushion 	Stool Stand 	Stool Riser 



Visit www.robsonmusic.com for product support


HEAD OFFICE AND CUSTOMER SUPPORT
21000 Trans-Canadienne
Baie D'Urfe, Quebec, H9X 4B7
Tel: (514) 457-6674 | Fax: (514) 457-0055
Phone: (514) 457-6674
Fax: (514) 457-0055
Website: www.robsonmusic.com
Email: info@robsonmusic.com

Always ask for adult assistance in setting up this drum set.
Before setting up this drum set, carefully review the contents to ensure that nothing is missing.

Assembly Instructions

Bass Drum Spurs

1. Loosen wingnuts then insert bass drum spurs into the push mounts collars and then tighten. Mounting spurs are nearer to the front of the drum.

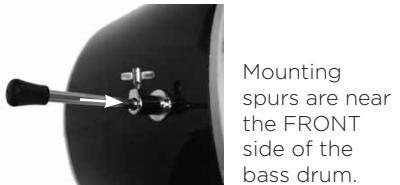


Bass Drum
(follow diagram below for correct layering)

- 2. Place front skin (with logo facing out) on to front of the drum.
- 3. Place hoop A over drum.
- 4. Place back skin over rear of drum.

5. Place hoop B over rear skin. NOTE: flared sides of hoops should face each other.


NOTE: Ensure that protruding tab for foot pedal on hoop B is facing the drummer's position and lays flat on the floor.

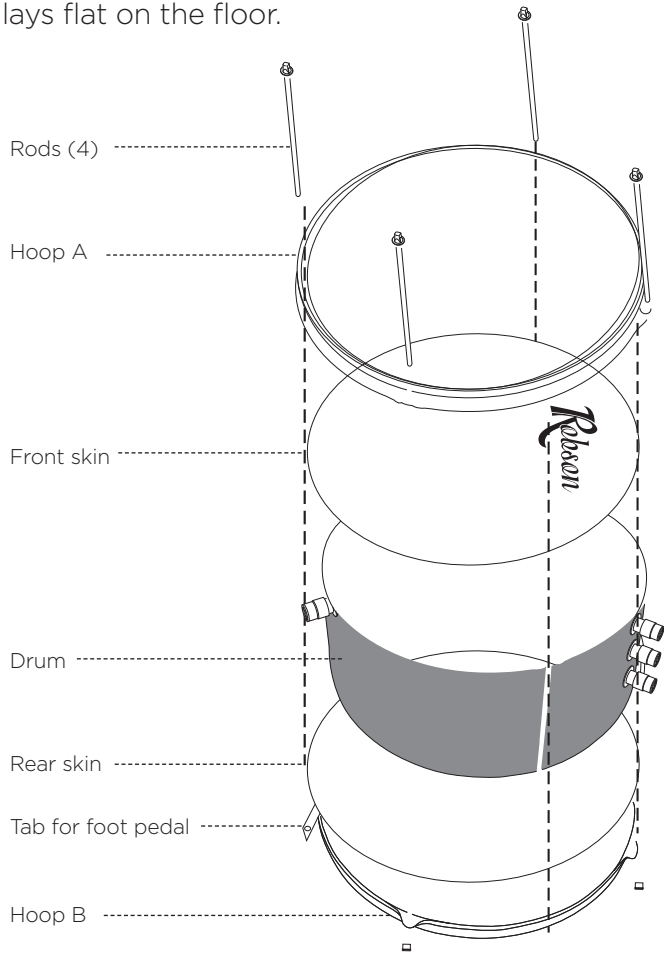

6. Before securing the rods and nuts, the bassdrum should be assembled like this (see image below). Note that the tab for the foot pedal is FACING the drummer position, and resting flat on the floor.



7. Insert four Rods through both hoops from rear-to-front.

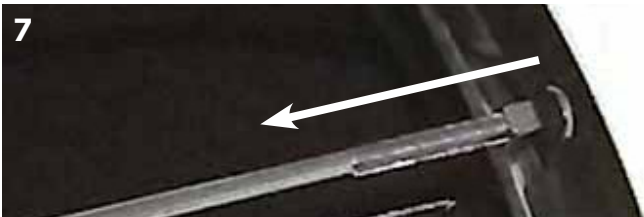


7B. Secure included nuts and tighten with tuning key. Be sure to rods in specified criss-cross pattern. DO NOT OVERTIGHTEN.

NOTE: square nut must be inserted into square holes on hoops.




Bass Drum Pedal

8. Insert the felt beater to the bass drum pedal and tighten wing nut.

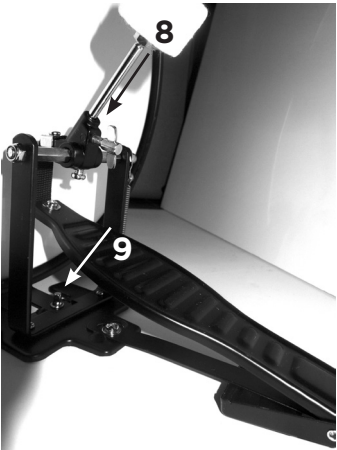


9. Attach the bass drum pedal to the rear of the bass drum by aligning screw hole (9) onto protruding tab of hoop. Insert screw from and tighten with drum key.

9B. Uncurl heel of bass pedal and lay flat.

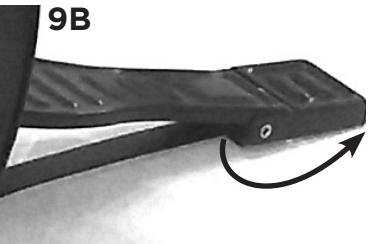


Mount the Snare and Tom Drums

10. Slide the long end of an L mounting arm into snare push mount slot (A) located on top of the bass drum, and tighten wing nut. From the drummer's position, ensure the snare mount is pointing to the left.

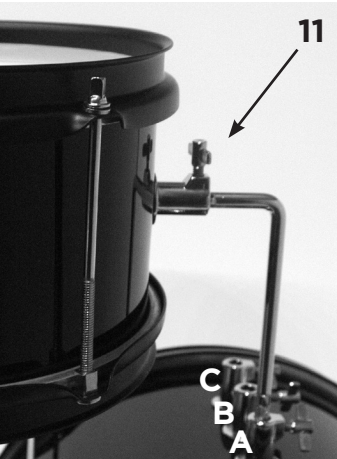

11. To attach the snare drum, begin by loosening the wing nut, then inserting the shorter end of the L mounting arm into the push mount on the snare. Finally, tighten wing nut.

12. To mount the tom, repeat the steps above, using slot B on top of the bass drum. Ensure that the mounting arm is pointing to the right. To attach the tom, begin by loosening the wing nut, then inserting the shorter end of the L mounting arm into the push mount on the snare. Finally, tighten wing nut.

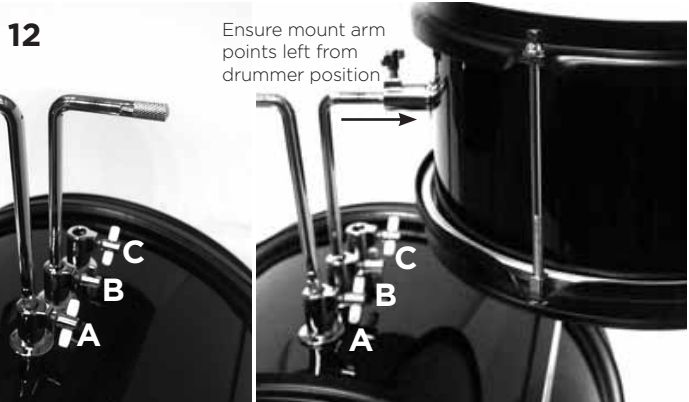

Mount the Cymbal

13. Begin by sliding the cymbal arm into the cymbal push mount (C) on top of the bass drum with the arm pointing away from the drummer's position.



14. Remove the wing nut, washer, and top felt. Place the cymbal on the bottom felt with the Robson logo facing up. Replace the top felt, washer and wing nut on the cymbal.

